GROVE


LOAD CHARTS RT650E


85% STABILITY
ON OUTRIGGERS
75% STABILITY
ON RUBBER

229642 SERIAL NUMBER

Dimensions and weights

Dimensions

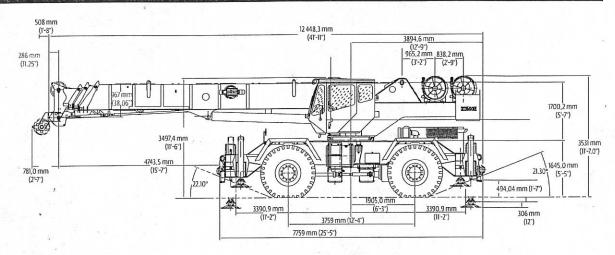

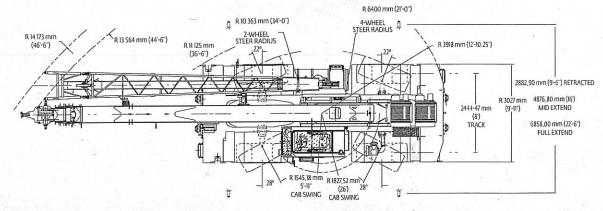

37	ni	17
	216	eigh

	G	VW	Front		R	ear
	kg	(lb)	kg	(lb)	kg	(lb)
RT600E Basic Machine: Including 105 ft main boom, main hoist with 450 ft of wire rope, IPO, full pinned counterweight, and air conditioner	32 841	(72,402)	14 760	(32,539)	18 082	(39,864)
Add: 29 ft - 51 ft telescopic swingaway + carrier brackets	-957.00	(2109)	1432	(3456)	-611	(-1347)
Add: 450 ft of wire rope on Auxiliary Hoist	-255	(563)	-96	(-213)	-342	(755)
Add: Auxiliary boom nose	59	(131)	162	(358)	-102	(-227)
Add: 35 t (40 USt) 3-sheave hookblock (stowed in trough)	373	(823)	383	(845)	-9.9	(-22)
Add: 45 t (50 USt) 3-sheave hookblock (stowed in trough)	458	(1010)	470	(1037)	-12	(-27)
Add: 7,5 t (8.3 USt) headache ball	161	(355)	279	(616)	-118	(-261)
Add: Full aluminum decking	113	(250)	58	(128)	55	(122)
Remove: Counterweight	-5556	(-12,250)	2257	(4976)	-7814	(-17,226)

TABLE OF CONTENTS

GENERAL NOTES	4
WEIGHT REDUCTIONS / LINE PULLS & REEVING INFO	5
LIFTING AREA DIAGRAMS	6
RANGE DIAGRAM	7
ON OUTRIGGERS FULLY EXTENDED	
MAIN BOOM	8
EXTENSION	9
ON RUBBER	10-11
ON OUTRIGGERS 50% EXTENDED	
MAIN BOOM	13
EXTENSION	14
ON OUTRIGGERS 0% EXTENDED	
MAIN BOOM	15
TIRE INFLATION	16

NOTES FOR LIFTING CAPACITIES

GENERAL:

- 1. Rated loads as shown on lift chart pertain to this machine as originally manufactured and equipped. Modifications to the machine or use of optional equipment other than that specified can result in a reduction of capacity.
- 2. Construction equipment can be hazardous if improperly operated or maintained. Operation and maintenance of this machine shall be in compliance with the information in the Operator's and Safety Handbook, Service Manual and Parts Manual supplied with this machine. If these manuals are missing, order replacements from the manufacturer through the distributor.
- 3. The operator and other personnel associated with machine shall fully acquaint themselves with the latest American National Safety Standards (ASME/ANSI) for cranes.

SETUP:

- The machine shall be level and on a firm supporting surface. Depending on the nature of the supporting surface, it may be necessary to have structural supports under the outrigger floats or tires to spread the load to a larger bearing surface.
- 2. For outrigger operation, all outriggers shall be properly extended with tires raised free of crane weight before operating the boom or lifting loads.
- 3. When machine is equipped with center front stabilizer, the front stabilizer shall be set in accordance with instructions in Operator's and Safety Handbook.
- 4. When equipped with removable and/or extendible counterweight, the proper counterweight shall be installed and fully extended before and during operation.
- 5. Tires shall be inflated to the recommended pressure before lifting on rubber.
- 6. With certain boom and hoist tackle combinations, maximum capacities may not be obtainable with standard cable lengths.
- 7. Unless approved by the crane manufacturer, do not travel with boom extension or jib erected unless otherwise noted. Refer to Operator's and Safety Handbook for job-site travel information.

OPERATION:

- 1. Rated loads at rated radius shall not be exceeded. Do not attempt to tip the machine to determine allowable loads. For clamshell, grapple, magnet or concrete bucket operation, weight of component and load must not exceed 80% of rated lifting capacities.
- 2. All rated loads have been tested to and meet the requirements of SAE J1063 Cantilevered Boom Crane Structures Method of Test, and do not exceed 85% of the tipping load on outriggers fully extended and SAE J1289 Mobile Crane Stability Ratings [1.25P < (T-0.1A)] on outriggers 50% and 0% extended (fully retracted) as determined by SAE J765 Crane Stability Test Code.</p>
- 3. Rated loads include the weight of hookblock, slings and auxiliary lifting devices and their weights shall be subtracted from the listed rating to obtain the net load to be lifted. When more than the minimum required parts of line needed to pick the load are used, the additional rope weight as measured from the lower sheaves of the the main boom nose shall be considered part of the load to be lifted. When both the hook block and headache ball are reeved, the lifting device that is NOT in use, including the line as measured from the lower sheave(s) of the nose supporting the unused device shall be considered part of the load.
- 4. Load ratings are based on freely suspended loads. No attempt shall be made to move a load horizontally on the ground in any direction.
- 5. The maximum in-service wind speed is 20 m.p.h. It is recommended when wind velocity is above 20 m.p.h., rated loads and boom lengths shall be appropriately reduced. For machines not in-service, the main boom should be retracted and lowered with the swing brake set in wind velocities over 30 m.p.h.
- 6. Rated loads are for lift crane service only.
- 7. Do not operate at a radius or boom length where capacities are not listed. At these positions, the machine may overturn without any load on the hook.
- 8. The maximum load which can be telescoped is not definable because of variations in loadings and crane maintenance, but it is safe to attempt retraction and extension of the boom within the limits of the capacity chart.
- 9. When the boom length or lift radius or both are between values listed, the smallest load shown at either the next larger radius or next longer or shorter boom length shall be used.
- 10. For safe operation, the user shall make due allowances for his particular job conditions, such as: soft or uneven ground, out of level conditions, high winds, side loads, pendulum action, jerking or sudden stopping of loads, experience of personnel, two machine (tandem) lifts, traveling with loads, electric wires, obstacles, hazardous conditions, etc. Side pull on boom or jib is extremely dangerous.
- 11. If machine is equipped with individually controlled powered boom sections, the boom sections must be extended equally at all times.
- 12. Never handle personnel with this machine unless the requirements of the applicable national, state, and local regulations and safety codes are met.
- 13. Keep load handling devices a minimum of 42 inches below boom head at all times.
- 14. The boom angle before loading should be greater than the loaded boom angle to account for deflection.
- 15. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 16. Capacities for the 33 ft. boom length shall be lifted with boom fully retracted. If boom is not fully retracted, capacities shall not exceed those shown for the 40 ft. boom length.
- 17. When operating the machine in the "On Outriggers 50% Extended (16' spread)" mode, the outrigger beam pins must be engaged. When operating in the "On Outriggers 0% Extended (9' 5.5" spread)" mode, the outrigger beams must be fully retracted. Failure to follow these precautions could result in structural damage or loss of stability of the machine.
- 18. Regardless of counterweight and outrigger spread configuration, no deduct is required from the main boom charts for a stowed boom extension.
- 19. Do not lift loads when boom is fully lowered. The Load Moment Indicator (LMI) senses pressure and will not provide warnings or lockout. The crane can become overloaded if lift cylinder(s) is fully retracted.
- 20. The maximum outrigger pad load is 69,100 lb.

DEFINITIONS:

- Operating Radius: Horizontal distance from a projection of the axis of rotation to the supporting surface before loading to the center of the vertical hoist line or tackle with load applied.
- 2. <u>Loaded Boom Angle</u> (Shown in Parenthesis on Main Boom Capacity Chart): is the angle between the boom base section and the horizontal, after lifting the rated load at the rated radius with the rated boom length.
- 3. Working Area: Areas measured in a circular arc about the center line of rotation as shown on the working area diagram.
- 4. Freely Suspended Load: Load hanging free with no direct external force applied except by the lift cable.
- Side Load: Horizontal force applied to the lifted load either on the ground or in the air.

WEIGHT REDUCTIONS FOR LOAD HANDLING DEVICES

29 FT. OFFSETTABLE BOOM EXTENSION				
*Erected -	4,412 lb.			
29 FT 51 FT. TELE. BOOM EXTENSION				
*Erected (Retracted) -	6,611 lb.			
*Erected (Extended) -	9,332 lb.			

^{*}Reduction of main boom capacities

When lifting over swingaway and/or jib combinations, deduct total weight of all load handling devices reeved over main boom nose directly from swingaway or jib capacity.

NOTE: All load handling devices and boom attachments are considered part of the load and suitable allowances MUST BE MADE for their combined weights. Weights are for Grove furnished equipment.

137 lb.
LLS:
1075 lb.+
1000 lb.+
800 lb.+
350 lb.+
370 lb.+

⁺Refer to rating plate for actual weight.

LINE PULLS AND REEVING INFORMATION


HOISTS	CABLE SPECS.	PERMISSIBLE LINE PULLS	NOMINAL CABLE LENGTH
Main	3/4" (19 mm) 6x37 Class EIPS, IWRC Special Flexible Min. Breaking Strength 58,800 lb.	16,800 lb.	450 ft.
Main & Aux.	3/4" (19 mm) 35x7 Class Rotation Resistant (non-rotating) Min. Breaking Strength 85,800 lb.	16,800 lb.	450 ft.

The approximate weight of 3/4" wire rope is 1.5 lb./ft.

HOIST PERFORMANCE


	Hoist Line Pulls		Drum	ım Rope	
Wire	I Iwo Speed Hoist I		Capacity (ft.)		
Rope Layer	Low	High	Lavier	Tatal	
Layo.	Available lb.*	Available lb.*	Layer	Total	
1	18,134	9,067	101	101	
2	16,668	8,334	110	211	
3	15,420	7,710	120	331	
. 4	14,347	7,174	129	460	
5	13,413	6,707	139	599	
6	12,594	6,297	149	748	

^{*}Max. lifting capacity: 6x37 and 35x7 class = 16,800 lb.

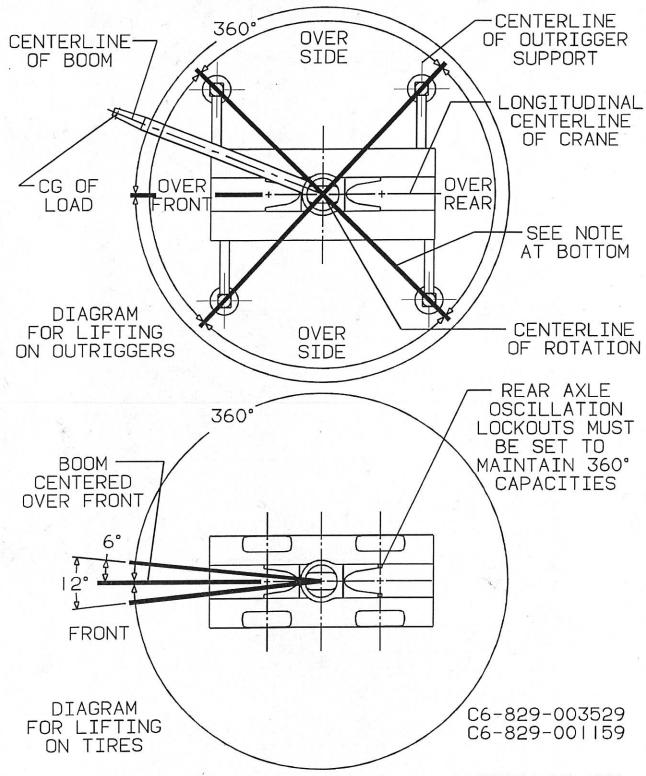

BOLD LINES DETERMINE THE LIMITING POSITION OF ANY LOAD FOR OPERATION WITHIN WORKING AREAS INDICATED WORKING AREA DIAGRAM

WORKING RANGE DIAGRAM

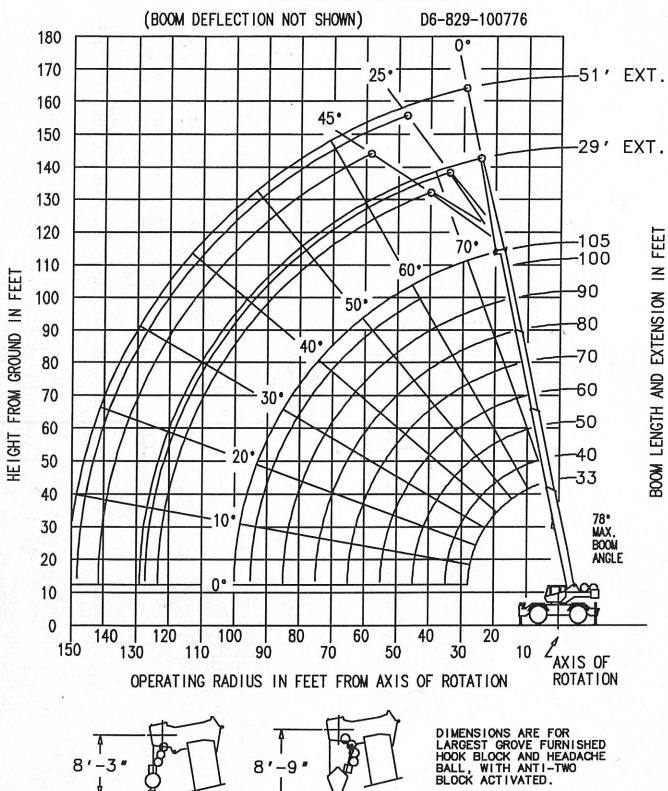

RATED LIFTING CAPACITIES IN POUNDS 33 FT. - 105 FT. BOOM

ON OUTRIGGERS FULLY EXTENDED - 360°

Radius					#0001				
in	1 1			Main Bo	om Lengt	h in Feet			
Feet	33	40	50	60	70	80	90	100	105
10	100,000 (69.5)	80,550 (73.5)	67,250 (77)						
12	87,100 (65.5)	79,150 (70.5)	64,200 (75)	*56,100 (78)				- 4	
15	69,050 (59.5)	69,550 (65.5)	59,950 (71)	51,800 (75)	45,200 (77.5)				
20	50,500 (47.5)	50,950 (57)	51,400 (64.5)	44,500 (69.5)	38,550 (73)	34,450 (75.5)	*31,400 (78)		
25	38,300 (32)	38,850 (47)	39,350 (58)	39,650 (64.5)	37,100 (68.5)	29,850 (72)	27,250 (74.5)	21,000 (76.5)	18,35 (77.5
30		30,700 (34.5)	31,200 (50.5)	31,500 (58.5)	31,700 (64)	26,350 (68)	24,100 (71)	21,000 (73.5)	18,35 (74.5)
35			25,450 (41.5)	25,750 (52.5)	26,000 (59)	23,650 (64)	21,500 (67.5)	19,150 (70)	18,35 (71.5)
40	See Note 16		20,850 (30.5)	21,200 (46)	21,600 (54)	21,350 (59.5)	19,400 (64)	16,650 (67)	17,30 (68.5)
45				17,100 (38)	17,350 (48.5)	17,300 (55)	17,300 (60)	14,650 (64)	15,75 (65.5
50			(- 1 5 kg) (- 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	13,950 (28)	14,150 (42.5)	14,200 (50.5)	14,200 (56)	13,000 (60.5)	14,30 (62.5)
55					11,700 (35)	11,750 (45.5)	11,850 (52)	11,900 (57)	12,000 (59)
60					9,730 (26)	9,870 (39.5)	9,980 (47.5)	10,100 (53.5)	10,150 (55.5)
65						8,300 (33)	8,440 (42.5)	8,600 (49.5)	8,680 (52)
70						6,960 (24.5)	7,170 (37.5)	7,340 (45.5)	7,430 (48.5)
75							6,080 (31)	6,290 (40.5)	6,390 (44.5)
80						16	5,130 (23)	5,380 (35.5)	5,490 (40)
85						7 2		4,580 (29.5)	4,720 (35)
90						Trans.		3,880 (22)	4,020 (29)
95									3,400 (21.5)
/linimum	boom and	gle (°) for	indicated	l length (r	no load)		4		0
/laximum	n boom ler	ngth (ft.)	at 0° boo	m angle (no load)	9,			105

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.
*This capacity is based on maximum boom angle.

		Lifting O	g Capacit n Outrig	ies at Ze gers Ful	ro Degre ly Extend	e Boom ded - 360	Angle °	21.	
Boom		-		Main Bo	om Lengt	h in Feet			
Angle	33	40	50	60	70	80	90	100	
0°	16,250 (28.2)	12,500 (35)	8,780 (45)	6,290 (55)	4,510 (65)	3,160 (75)	2,110 (85)	1,260 (95)	1.20

NOTE: () Reference radii in feet.

A6-829-100936

29 FT. - 51 FT. TELE OFFSETTABLE BOOM EXTENSION ON OUTRIGGERS FULLY EXTENDED - 360°

Radius	***	29 ft. LENG	iTH	51 ft. LENGTH		
in	#0021	#0022	#0023	#0041	#0042	#004
Feet	0° OFFSET	25° OFFSET	45° OFFSET	0° OFFSET	25° OFFSET	45° OFFSE
30	*9,000 (78)		*			
35	9,000 (77)			*6,000 (78)		
40	9,000 (74.5)	8,000 (77.5)		6,000 (77)		
45	9,000 (72.5)	7,560 (76)	*5,660 (78)	6,000 (76)		
50	8,760 (70)	7,170 (74)	5,600 (76)	6,000 (74)		
55	8,030 (67.5)	6,820 (71.5)	5,500 (73.5)	6,000 (72)	*4,120 (78)	
60	7,380 (65)	6,500 (69)	5,300 (71)	6,000 (70)	3,900 (77)	
65	6,770 (62.5)	6,210 (66.5)	5,180 (68.5)	6,000 (68)	3,710 (75)	*2,74 (78)
70	6,210 (60)	5,950 (64)	4,890 (66)	5,620 (66)	3,530 (72.5)	2,660 (76.5
75	5,710 (57.5)	5,710 (61.5)	4,620 (63)	5,210 (64)	3,370 (70.5)	2,580
80	5,250 (55)	5,500 (58.5)	4,370 (60.5)	4,860 (61.5)	3,220 (68.5)	2,520 (72)
85	4,790 (52)	5,300 (56)	4,100 (57.5)	4,540 (59.5)	3,080 (66)	2,460 (69.5
90	4,090 (49)	4,650 (53)	3,820 (54)	4,260 (57)	2,960 (63.5)	2,410 (67)
95	3,480 (46)	3,960 (49.5)		4,000 (55)	2,850 (61.5)	2,360 (64.5
100	2,930 (42.5)	3,350 (46)		3,770 (52.5)	2,750 (59)	2,330 (62)
105	2,440 (39)	2,810 (42.5)		3,360 (50)	2,660 (56)	2,300 (59)
110	2,000 (35)	2,320 (38.5)		2,910 (47.5)	2,570 (53.5)	2,280 (56)
115	1,610 (30.5)			2,500 (44.5)	2,500 (50.5)	
120	1,250 (25.5)			2,120 (41.5)	2,430 (47.5)	
125			9.4 C	1,780 (38.5)	2,250 (44.5)	
130				1,470 (35)	1,820 (40.5)	
135				1,180 (31)	1,420 (36.5)	
Min. boom angle or indicated length (no load)	24°	32°	45°	25°	35°	45°
Max. boom length at 0° boom angle (no load)		90 ft.			90 ft.	

NOTE: () Boom angles are in degrees.

NOTES:

- 1. All capacities above the bold line are based on structural strength of boom extension.
- 2. 29 ft. and 51 ft. boom extension lengths may be used for single line lifting service.
- 3. Radii listed are for a fully extended boom with the boom extension erected. For main boom lengths less than fully extended, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is configured. For boom angles not shown, use the rating of the next lower boom angle.

WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.

- Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- 5. Capacities listed are with outriggers fully extended and vertical jacks set only.

[#]LMI operating code. Refer to LMI manual for instructions.

^{*}This capacity based on maximum boom angle.

^{**29} ft. capacities are also applicable to fixed offsettable ext. However, the LMI codes will change to #0051, #0052 and #0053 for 0°, 25° and 45° offset, respectively.

ON RUBBER CAPACITIES

STATIONARY CAPACITIES 360°

Radius		2.00	#9005		AV.			
in	Main Boom Length in Feet							
Feet	33	40	50	60	70			
10	38,550 (69.5)	38,550 (73.5)						
12	32,550 (65.5)	32,550 (70.5)	32,550 (75)					
15	23,700 (59.5)	23,700 (65.5)	23,700 (71)	23,700 (75)				
20	14,450 (47.5)	14,450 (57)	14,450 (64.5)	14,450 (69.5)	14,450 (73)			
25	9,640 (32)	9,640 (47)	9,640 (58)	9,640 (64.5)	9,640 (68.5)			
30		6,840 (34.5)	6,840 (50.5)	6,840 (58.5)	6,840 (64)			
35			4,850 (41.5)	4,850 (52.5)	4,850 (59)			
40	See Note 16		3,450 (30.5)	3,450 (46)	3,450 (54)			
45				2,410 (38)	2,410 (48.5)			
50				1,610 (28)	1,610 (42.5)			
Min. boom	angle (°) fo	r indicated	length (no	load)	30			
Max. boom	n length (ft.)	at 0° boon	n angle (no	load)	60			

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions.

Liftin			ero Degre per - 360°	e Boom Angle
Boom	149.4	Main Bo	om Lengt	h in Feet
Angle	33	40	50	
0°	7,580 (28.2)	4,850 (35)	2,410 (45)	

NOTE: () Reference radii in feet.

A6-829-100836B

STATIONARY CAPACITIES DEFINED ARC OVER FRONT (See Note 3)

Radius		9-	#9005		
in		Main Bo	om Lengt	h in Feet	
Feet	33	40	50	60	70
10	46,600 (69.5)	40,800 (73.5)	34,600 (77)		
12	40,800 (65.5)	40,800 (70.5)	34,600 (75)		
15	34,000 (59.5)	34,000 (65.5)	34,000 (71)	26,650 (75)	21,500 (77.5)
20	26,050 (47.5)	26,050 (57)	26,050 (64.5)	26,050 (69.5)	21,500 (73)
25	18,200 (32)	18,200 (47)	18,200 (58)	18,200 (64.5)	18,200 (68.5)
30		13,100 (34.5)	13,100 (50.5)	13,100 (58.5)	13,100 (64)
35			10,050 (41.5)	10,050 (52.5)	10,050 (59)
40	See Note 16		7,900 (30.5)	7,900 (46)	7,900 (54)
45	41			6,290 (38)	6,290 (48.5)
50				5,050 (28)	5,050 (42.5)
55					4,060 (35)
60					3,260 (26)
Min. boom	angle (°) fo	r indicated	length (no	load)	0
Max. boom	length (ft.)	at 0° boon	n angle (no	load)	70

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions.

Lifting Capacities at Zero Degree Boom Angle On Rubber - Defined Arc Over Front										
Boom		Main Boom Length in Feet								
Angle	33	40	50	60	70					
0°	0° 14,550 10,050 6,290 4,060 2,590 (28.2) (35) (45) (55) (65)									

NOTE: () Reference radii in feet.

A6-829-100835B

ON RUBBER CAPACITIES (cont'd.)

PICK & CARRY CAPACITIES (UP TO 2.5 MPH) - BOOM CENTERED OVER FRONT (See note 7)

					- "
Radius			#9006		
in		Main Bo	om Lengt	h in Feet	•
Feet	33	40	50	60	70
10	30,150 (69.5)	30,150 (73.5)	17,850 (77)		
12	30,150 (65.5)	30,150 (70.5)	17,850 (75)		
15	29,650 (59.5)	29,650 (65.5)	17,850 (71)	17,850 (75)	14,750 (77.5)
20	22,650 (47.5)	22,650 (57)	17,850 (64.5)	17,850 (69.5)	14,750 (73)
25	17,850 (32)	17,850 (47)	17,850 (58)	17,850 (64.5)	14,750 (68.5)
30		13,100 (34.5)	13,100 (50.5)	13,100 (58.5)	13,100 (64)
35		A.	10,050 (41.5)	10,050 (52.5)	10,050 (59)
40	See Note 16		7,340 (30.5)	7,340 (46)	7,340 (54)
45				6,020 (38)	6,020 (48.5)
50	-			4,940 (28)	4,940 (42.5)
55					4,030 (35)
60					3,260 (26)
Min. boom	angle (°) fo	r indicated	length (no l	oad)	0
Max. boom	length (ft.)	at 0° boom	angle (no	load)	70

NOTE: () Boom angles are in degrees. #LMI operating code. Refer to LMI manual for operating instructions.

Lifting Capacities at Zero Degree Boom Angle On Rubber - Pick & Carry									
Boom	Boom Main Boom Length in Feet								
Angle	33	40	50	60	70				
0° 14,550 10,050 6,020 4,030 2,590 (28.2) (35) (45) (55) (65)									

NOTE: () Reference radii in feet.

A6-829-100837B

NOTES TO ALL RUBBER CAPACITY CHARTS:

- 1. Capacities are in pounds and do not exceed 75% of tipping loads as determined by test in accordance with SAE J765.
- 2. Capacities are applicable to machines equipped with 23.5x25 (20 ply) tires at 85 psi cold inflation pressure.
- 3. Defined Arc Over front includes 6° on either side of longitudinal centerline of machine (ref. drawing C6-829-003529).
- 4. Capacities appearing above the bold line are based on structural strength and tipping should not be relied upon as a capacity limitation.
- 5. Capacities are applicable only with machine on firm level surface.
- 6. On rubber lifting with boom extensions not permitted.
- 7. For pick and carry operation, boom must be centered over front of machine, mechanical swing lock engaged and load restrained from swinging. When handling loads in the structural range with capacities close to maximum ratings, travel should be reduced to creep speeds.
- 8. Axle lockouts must be functioning when lifting on rubber.
- 9. All lifting depends on proper tire inflation, capacity and condition. Capacities must be reduced for lower tire inflation pressures. See lifting capacity chart for tire used. Damaged tires are hazardous to safe operation of crane.
- 10. Creep not over 200 ft. of movement in any 30 minute period and not exceeding 1 mph.

RATED LIFTING CAPACITIES IN POUNDS 33 FT. - 105 FT. BOOM

ON OUTRIGGERS 50% EXTENDED (16 ft. SPREAD) - 360°

Radius		-			#4001			a study with a collection	
in				Main Bo	om Lengt	h in Feet			
Feet	33 -	40	50	60	70	80	90	100	105
10	80,000 (69.5)	73,500 (73.5)	67,200 (77)						
12	77,750 (65.5)	69,500 (70.5)	62,300 (75)	*56,100 (78)					
15	67,300 (59.5)	65,550 (65.5)	57,300 (71)	51,800 (75)	45,200 (77.5)				
20	39,400 (47.5)	39,550 (57)	39,950 (64.5)	39,500 (69.5)	38,050 (73)	34,450 (75.5)	*31,400 (78)		
25	25,700 (32)	25,850 (47)	26,200 (58)	26,650 (64.5)	27,200 (68.5)	26,800 (72)	26,050 (74.5)	21,000 (76.5)	18,350 (77.5)
30		18,350 (34.5)	18,700 (50.5)	19,150 (58.5)	19,650 (64)	19,700 (68)	19,800 (71)	19,600 (73.5)	18,350 (74.5)
35			14,000 (41.5)	14,400 (52.5)	14,900 (59)	14,950 (64)	15,000 (67.5)	15,100 (70)	15,150 (71.5)
40	See Note 16		10,750 (30.5)	11,150 (46)	11,600 (54)	11,650 (59.5)	11,700 (64)	11,800 (67)	11,800 (68.5)
45				8,800 (38)	9,240 (48.5)	9,270 (55)	9,330 (60)	9,390 (64)	9,420 (65.5)
50		1,		6,960 (28)	7,420 (42.5)	7,450 (50.5)	7,500 (56)	7,550 (60.5)	7,580 (62.5)
55	7				5,990 (35)	6,010 (45.5)	6,050 (52)	6,100 (57)	6,130 (59)
60	2-				4,800 (26)	4,850 (39.5)	4,890 (47.5)	4,930 (53.5)	4,960 (55.5)
65						3,900 (33)	3,930 (42.5)	3,970 (49.5)	3,990 (52)
70						3,060 (24.5)	3,120 (37.5)	3,160 (45.5)	3,180 (48.5)
75						E .	2,430 (31)	2,470 (40.5)	2,490 (44.5)
80							1,810 (23)	1,880 (35.5)	1,900 (40)
85								1,350 (29.5)	1,380 (35)
0.1A (lb.)	820	790	750	730	720	710	700	700	700
	boom an								0
Maximum	n boom le	ngth (ft.)	at 0° boo	m angle (no load)				105

NOTE: () Boom angles are in degrees.
#LMI operating code. Refer to LMI manual for operating instructions.

*This capacity is based on maximum boom angle.

				ties at Ze ggers 50'				
Boom				Main Bo	om Lengt	h in Feet		
Angle	33	40	50	60	70	80	90	1
0°	16,250 (28.2)	12,500 (35)	8,280 (45)	5,460 (55)	3,800 (65)	2,340 (75)	1,270 (85)	

NOTE: () Reference radii in feet.

A6-829-100833A

29 FT. - 51 FT. TELE BOOM EXTENSION

ON OUTRIGGERS 50% EXTENDED (16 ft. SPREAD) - 360°

	**2	9 ft. LENG	TH	5	1 ft. LENG	ГН
Radius in	#4021	#4022	#4023	#4041	#4042	#4043
Feet	0° OFFSET	25° , OFFSET	45° OFFSET	0° OFFSET	25° OFFSET	45° OFFSET
30	*9,000 (78)					
35	9,000 (77)		7 × ±	*6,000 (78)		
40	9,000 (74.5)	8,000 (77.5)		6,000 (77)		
45	9,000 (72.5)	7,560 (76)	*5,660 (78)	6,000 (76)		
50	7,870 (70)	7,170 (74)	5,600 (76)	6,000 (74)		
55	6,530 (67.5)	6,820 (71.5)	5,500 (73.5)	6,000 (72)	*4,120 (78)	
60	5,410 (65)	6,320 (69)	5,300 (71)	6,000 (70)	3,900 (77)	
65	4,380 (62.5)	5,260 (66.5)	5,180 (68.5)	5,260 (68)	3,710 (75)	*2,740 (78)
70	3,490 (60)	4,260 (64)	4,810 (66)	4,460 (66)	3,530 (72.5)	2,660 (76.5)
75	2,730 (57.5)	3,410 (61.5)	3,880 (63)	3,770 (64)	3,370 (70.5)	2,580 (74)
80	2,070 (55)	2,670 (58.5)	3,050 (60.5)	3,140 (61.5)	3,220 (68.5)	2,520 (72)
85	1,500 (52)	2,030 (56)	2,330 (57.5)	2,550 (59.5)	3,080 (66)	2,460 (69.5)
90	1,000 (49)	1,470 (53)	1,700 (54)	2,030 (57)	2,960 (63.5)	2,410 (67)
95				1,570 (55)	2,500 (61.5)	2,360 (64.5)
100				1,160 (52.5)	1,980 (59)	2,330 (62)
105					1,510 (56)	1,840 (59)
110					1,080 (53.5)	1,320 (56)
0.1A	740	690	660	650	600	560
Min. boom angle or indicated length (no load)	42°	43°	53°	45°	46°	55°
Max. boom length at 0° boom angle (no load)		80 ft.			70 ft.	

NOTE: () Boom angles are in degrees.

A6-829-100846A

NOTES:

- All capacities above the bold line are based on structural strength of boom extension.
- 2. 29 ft. and 51 ft. boom extension lengths may be used for single line lifting service.
- 3. Radii listed are for a fully extended boom with the boom extension erected. For main boom lengths less than fully extended, the rated loads are determined by boom angle. Use only the column which corresponds to the boom extension length and offset for which the machine is configured. For boom angles not shown, use the rating of the next lower boom angle.

WARNING: Operation of this machine with heavier loads than the capacities listed is strictly prohibited. Machine tipping with boom extension occurs rapidly and without advance warning.

- 4. Boom angle is the angle above or below horizontal of the longitudinal axis of the boom base section after lifting rated load.
- Capacities listed are with outriggers properly extended and vertical jacks set only.

[#]LMI operating code. Refer to LMI manual for instructions.

^{*}This capacity based on maximum boom angle.

^{**29} ft. capacities are also applicable to fixed offsettable ext. However, the LMI codes will change to #4051, #4052 and #4053 for 0° , 25° and 45° offset, respectively.

RATED LIFTING CAPACITIES IN POUNDS 33 FT. - 105 FT. BOOM

ON OUTRIGGERS 0% EXTENDED (9 ft. 5.5 in. SPREAD) - 360°

	T				,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,				
Radius			- north open and open and		#8001	TONIONAL MINISTER			
in		¥		Main Bo	om Leng	th in Feet			
Feet	33	40	50	60	70	80	90	100	105
10	60,000 (69.5)	57,100 (73.5)	53,300 (77)						
12	45,850 (65.5)	44,300 (70.5)	41,850 (75)	*39,650 (78)					-
15	30,700 (59.5)	30,850 (65.5)	31,100 (71)	29,750 (75)	28,500 (77.5)				* 1
20	18,300 (47.5)	18,400 (57)	18,750 (64.5)	19,150 (69.5)	19,550 (73)	18,900 (75.5)	*18,300 (78)		5. S
25	12,050 (32)	12,150 (47)	12,450 (58)	12,850 (64.5)	13,300 (68.5)	13,350 (72)	13,450 (74.5)	13,050 (76.5)	12,900 (77.5)
30		8,360 (34.5)	8,660 (50.5)	9,050 (58.5)	9,480 (64)	9,540 (68)	9,620 (71)	9,710 (73.5)	9,760 (74.5)
35			6,110 (41.5)	6,490 (52.5)	6,910 (59)	6,960 (64)	7,030 (67.5)	7,110 (70)	7,150 (71.5)
40	See Note 16		4,280 (30.5)	4,660 (46)	5,080 (54)	5,120 (59.5)	5,180 (64)	5,240 (67)	5,280 (68.5)
45			•	3,290 (38)	3,700 (48.5)	3,730 (55)	3,780 (60)	3,840 (64)	3,870 (65.5)
50				2,190 (28)	2,620 (42.5)	2,650 (50.5)	2,690 (56)	2,740 (60.5)	2,770 (62.5)
55					1,760 (35)	1,780 (45.5)	1,820 (52)	1,870 (57)	1,890 (59)
60					1,030 (26)	1,070 (39.5)	1,110 (47.5)	1,150 (53.5)	1,170 (55.5)
0.1A (lb.)	820	790	750	730	720	710	700	700	700
	angle (°) fo				0	24	36	44	47
	length (ft.)	at 0° boom	angle (no	load)			70		

NOTE: () Boom angles are in degrees.

#LMI operating code. Refer to LMI manual for operating instructions.

^{*}This capacity is based on maximum boom angle.

						ee Boom ded - 360		
Boom	ê Ba			Main Bo	om Lenç	th in Feet	*	
Angle	33	40	50	60				
0°	9,260 (28.2)	5,680 (35)	2,810 (45)	1,270 (55)				

NOTE: () Reference radii in feet.

	TIRE INFLATION - PSI (BAR)									
SIZE (FRONT	LOAD	TRA CODE	LIFTING SERVICE AND GENERAL TRAVEL	EXTENDED TRAVEL						
& REAR)	RANGE	CODE	STATIC, CREEP & 2.5 MPH (4.0 km/h)	INAVEL						
23.5x25	20 PR	E-3	85 (5.9)	85 (5.9)						
23.5R25 GY	**		80 (5.5)	80 (5.5)						
23.5R25 Michelin	*		75 (5.2)	75 (5.2)						